

Brakes

Item No.	Part No.	Quantity	Description	Notes	Item No.	Part No.	Quantity	Description	Notes
*1320	50397	1	Handbrake Clevis Pin		*1380	40-S-32	3	Spring Washer, $\frac{3}{16}$ in. dia.	
*1321	52091	2	Rear Handbrake Rod Adjuster Locknut		*1381	H1015	1	Seal—Outer	
1322	54163	2	„ „ „ Adjuster		*1382	H1480	1	Spreader Washer	
*1323	54245	1	„ „ „ Pull Off Spring		*1383	H1483	1	„ Seal	
*1324	50444	1	„ Brake Cable, complete		*1384	H1736	1	Spring—Seal Spreader	
1325	54164	1	„ „ Rod		*1385	H1737	1	„ Retainer	
*1326	50445	2	Cable Abutment Bracket		*1386	H1017	1	Sealing Ring	
			COMPENSATOR MECHANISM		*1387	H1498	1	Boot Cylinder Body	
*1330	4098x8	1	Brake Compensator Link		*1388	H1497	1	Locknut Plunger	
*1331	4098x9	2	„ „ „ Bush		*1389	H1925	1	Washer	
*1332	4098x10	1	„ „ „ Washer—Top		*1390	H-2794	1	Seal Support Washer	
*1333	4098x11	1	„ „ „ „ —Bottom					SUPPLY TANK, PIPES AND HOSES	
*1334	50450	1	Compensator Lever		*1400	54167	1	Supply Tank (H2743)	
*1335	50452	1	„ „ „ Washer—Bottom		1401	54187	1	Pipe Supply Tank to L/Pressure Hose (H3363)	
*1336	4095x15	3	„ „ „ —Top		1402	54169	1	Low Pressure Hose (H1278A)	
*†1337	FN406/K	2	Slotted Nut, $\frac{3}{8}$ in. B.S.F.		1403	54175	2	„ „ „ Clips (H3000)	
*†1338	50571	2	Greaser		1404	54233	2	Hydraulic Hose to Brake Drum (3271K)	
*1339	54101	1	Brake Cross Rod—L.H.		1405	54183	1	„ Pipe—M/Cyl. to Four Way (H3359)	
*1340	54102	1	„ „ „ —R.H.		1406	54181	1	„ „ —R.H. Front to Four Way (H3357)	
*1341	50455	4	„ Rod Fork		1407	54182	1	„ „ —L.H. „ „ „ „ (H3358)	
*1342	50456	4	Clevis Pin and Spring		*1408	54173	1	Four Way (H3489)	
*1343	54109	1	Brake Connecting Link Bolt		*1409	54168	1	High Pressure Hose to Rear T Piece (H3271F)	
*1344	54110	1	„ „ „ Spacing Collar		1410	54174	1	T Piece—Rear Axle (H3529)	
*†1345	50457	1	Compensator Clevis Pin		1411	54184	1	Hydraulic Pipe—Four Way to Rear Hose (H3360)	
			BRAKE PEDAL MECHANISM		*1412	54185	1	„ „ —T Piece to R.H. Rear (L.H.—L.H.D.) (H3361)	
1350	54067	1	Brake Pedal		*1413	54186	1	Hydraulic Pipe—T Piece to L.H. Rear (R.H.—L.H.D.) (H3362)	
*1351	50418	1	„ „ Pad		1414	54188	1	Hydraulic Pipe—M/Cyl. to L/Pressure Hose (H3364)	
*1352	50431	1	Slip Link Clevis Pin		1415	54103	1	Rear Hose Abutment Bracket	
1353	54072	1	Master Cylinder Adaptor		†1416	54176	3	Bulk Head Nut (30-BS-63)	
*1354	50457	1	Compensator Clevis Pin		1417	54172	1	Banjo Bolt (H1252)	
*1355	50424	1	Master Cylinder Fork Nut		1418	54171	1	„ (H2753)	
*1356	50423	1	„ „ Rod Fork		†1419	54178	1	Gasket, $\frac{3}{8}$ in. dia. (H1237)	
1357	54073	1	„ „ Eye Bolt		†1420	52256	1	„ $\frac{1}{8}$ in. dia. (GB5059)	
*†1358	54074	1	„ „ Pin Washer		†1421	54179	2	„ $\frac{1}{2}$ in. dia. (GB4731)	
*1359	50440	1	Draught Excluder		*†1422	54170	1	Union—Master Cylinder (H3429)	
*1360	54069	1	Pedal Return Spring		1423	52007	1	Brake Rod Stay Grommet	
1361	54075	2	Switch and Pull Off Spring Lug					LEFT HAND DRIVE ONLY	
1362	54071	1	Master Cylinder Rod		†1430	50414/B	1	Handbrake Lever Bracket (B-411)	
*1363	FN105/K	2	Nut, Master Cylinder Rod		†1431	54189	1	Hydraulic Pipe—M/Cyl. to Four Way	
			MASTER CYLINDER		†1432	54190	1	„ „ —M/Cyl. to Low Pressure Hose	
*†1370	54166	1	Master Cylinder H2713		†1433	54078	1	Stop Light Switch Lug	
*1371	H-2714	1	Cylinder Body—Front Half		†1434	54077	1	Brake Pedal	
*1372	H-1817	1	„ „ Rear Half		†1435	54079	1	Stop Light Switch Extension Link	
*1373	H2715	1	Sleeve					BRAKE DRUMS AND WHEEL STUDS	
*1374	H-2504	1	Shim		*1440	CD8975	2	Front Brake Drum	
*1375	H-2586	1	Plunger Outer Shell		*1441	CD8703	2	Rear „ „	
*1376	H2587	1	„ Rod		*†1442	50381	20	Wheel Studs	
*1377	H1927	3	Setscrew Cylinder Assembly		*†1443	50382	20	Nuts	
*1378	H1735	1	Spring Plunger Return						
*1379	H1016	1	Seal—Recuperating						

* Denotes items common to Jupiter

Always quote engine, body-frame, part and item numbers in full.

† Denotes items not illustrated