

# Electrical Equipment and Instruments

Item No.	Part No.	Quantity	Description	Notes	Item No.	Part No.	Quantity	Description	Notes
†2435	J54613	1	Copper Braid Cable—Engine to Chassis					<b>SWITCHES—Standard and De-luxe</b>	
†2436	995722	1	Body Harness—To R.H. Trafficator		†2500	50789	1	Stop Light Switch, Lucas No. 315725	
†2437	995723	1	Body Harness—To L.H. Trafficator and Rear Lights		†2501	52104	1	" " " Spring, Lucas No. 315723	
†2438	J54622	1	Boot Harness		†2502	JB51683	1	Trafficator Switch, Standard (illuminated)	
†2439	J54619	1	Body Harness		†2503	JB51684	1	Screen Wiper Switch marked (W)	
					†2504	JB51688	1	Light and Ignition Switch—Standard (Lucas No. PRS3)	
			<b>LAMPS—Standard and De-luxe</b>		†2505	JB51687	1	Starter Switch—Standard (Lucas No. SS5)	
2445	51562	2	Headlamp—R.H.D. Lucas F700 Lucas No. 50974		†2506	52421	1	Remote Starter Solenoid	
†2446	51563	2	" —L.H.D. " F700 " " 50804D		†2507	52642	1	" " " Bracket	
2447	51564	2	Sidelamp		†2508	JB51685	1	Panel Light Switch marked (P)	
†2448	51341	2	Stop Tail Lamp (Lucas No. 53150)		†2509	JB51686	1	Switch (marked H)—Standard	
†2449	51456	2	" " " Weathershield		*†2510	50790	1	Dipper Switch (Lucas No. 36007)	
†2450	51599	1	Number Plate Lamp, complete (Standard only)					<b>De-luxe Only</b>	
†2451	6180x3	1	Luggage Boot Lamp Grommet		†2515	JB51729	1	Heater Switch—Push Pull, marked (H)	
†2452	51604	1	Interior Light, complete		†2516	JB51730	1	Wiper " " " (W)	
†2453	51604A	1	" " " Shade		†2517	JB51731	1	Panel Light Switch—Push Pull, marked (P)	
†2454	50700	1	Fog Lamp—Standard (optional extra)		†2518	316217	1	Heater Switch Knob, marked (H)	
			<b>De-luxe Only</b>		†2519	JB51732	1	Starter Switch (Lucas No. SS5)	
†2460	51337	1	Fog Lamp Lucas No. 55063		†2520	JB51733	1	Light Switch, complete (Lucas No. PRS5)	
†2461	51559	1	" " Bracket—R.H.D.		†2521	51128	1	Ignition Key Barrel	
†2462	51560	1	" " " —L.H.D.		†2522	JB51734	1	" " Switch (Lucas No. S45)	
†2463	51457	1	" " Rubber Grommet		†2523	50783	1	Trafficator Switch	
†2464	JB51747	1	Number Plate and Reverse Lamp Lucas No. 469		†2524	JB51742	1	Plug Socket for Inspection Lamp	
†2465	51667	2	Boot Lamp and under Bonnet Lamp—Lucas 491		†2526	JB51819	1	Lighting Switch Lever	
					†2527	JB51817	1	" " only	
			<b>BULB HOLDERS—Standard and De-luxe</b>					<b>HEATER AND FITTINGS—De-luxe Model</b>	
†2470	JB51697	1	Instrument Light Harness and Bulb Holders		†2530	51098	1	Heater with Two-way Adaptor	
†2471	JB51809	1	Warning Light (main beam)—Lucas WL12		*†2531	51145	1	Two-way Adaptor only	
†2472	JB51698	1	Ignition Warning Light and Harness and Bulb Holder		†2532	52145	1	Heater Water Hose—Long	
†2473	390290	4	Panel Light Bulb Holder		†2533	52146	1	" " " —Short	
					*†2534	51103	4	Water Hose Clip	
			<b>BULBS—Standard and De-luxe</b>		†2535	51221	2	Defroster Hose, 11½ in. long—Convolute	
†2480	301	2	Headlamp Bulb—R.H. Dip (L.H.D.)		†2536	51100	1	" " Duct—L.H.	
†2481	354	2	" " " —L.H. " (R.H.D.)		†2537	51020	1	" " " —R.H.	
*†2482	989	2	Sidelamp		*†2538	6180x2	4	" " " —Grommet	
*†2483	361	2	Stop Tail Lamp		*†2539	52219	1	Heater Water Tap	
*†2484	989	1	Number Plate Illumination (Standard only)					<b>BATTERY AND FITTINGS</b>	
†2485	989	1	Boot Lamp Bulb		†2545	52562	1	Battery GTW9A (Lucas No. 22250)	
*†2486	256	2	Trafficator Festoon Bulb		†2546	52262	2	" " Bolt	
†2487	254	1	Interior Light Bulb		†2547	FN104 A	4	" " Brass Nuts	
†2488	987	2	Panel Light Bulb (Standard only)		†2548	51226	1	" " Flange	
*†2489	987	1	Ignition Warning Light Bulb		†2549	51227	1	" " Rubber	
†2490	987	1	Main Beam Warning Light		†2550	52714	1	" " Housing Bracket—L.H.D.	
			<b>De-luxe Only</b>		†2551	52717	2	Securing Bolt Carrier Strip—L.H.D.	
†2495	989	2	Number Plate Illumination Bulb		†2552	52721	2	Carrier Strip Packing Piece—L.H.D.	
†2496	325	1	Fog Lamp Bulb					<b>TRAFFICATORS</b>	
†2497	221	1	Reversing Light Bulb		*†2560	50791	2	Trafficator Assembly	
†2498	987	4	Panel Light Bulb		*†2561	50792	2	" " Bracket	

\* Denotes items common to Jupiter

Always quote engine, body-frame, part and item numbers in full.

† Denotes items not illustrated