
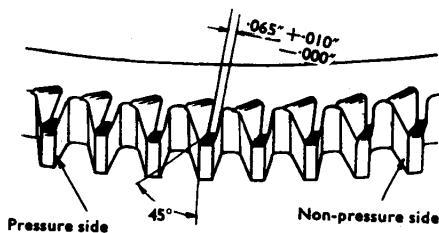
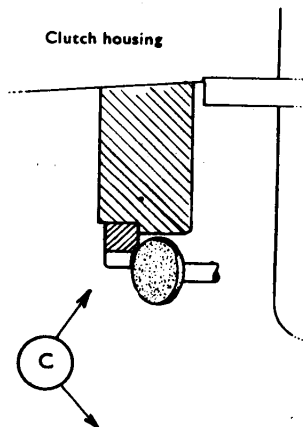


grinding the flywheel ring gear as shown at (C). This operation may be carried out on Javelin and Jupiter models with the engine in position using a grinding wheel of the dimensions shown at (B). The new type ring gear is fully interchangeable with the previous type and the fitting instructions remain the same.

For part number changes please refer to Spares Note No. 101.

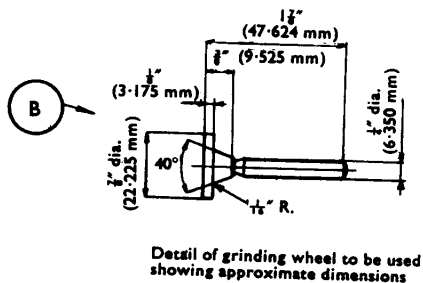

(A)