

Steering

Item No.	Part No.	Quantity	Description	Notes	Item No.	Part No.	Quantity	Description	Notes
			STEERING MECHANISM		*964	52668	2	Steering Ball	
930	50514	1	Oil Retainer		*965	54013	2	.. Socket Housing	
931	50299	1	Filler Plug		*966	54014	2	.. Ball Pressure Pad	
+932	52132	1	Steering Box Spring		*967	54015	2	Ball Joint Locknut	
933	50536	as reqd.	.. Column Shim		*968	54016	2	Steering Ball Spring	
934	J54528	1	.. Pinion Shaft including Horn Ring and Cable		*969	54017	2	Spring Retaining Nut	
+935	FB604/10A	1	.. Column Setscrew—Long		*970	50567	2	Steering Rod Socket	
+936	FB604/7A	2 —Short		*971	50568	2 Pad	
937	52546	1	Locking Washer for Eccentric Bush		974	50569	2	.. Link Cover	
938	52545	1	Eccentric Pinion Bush		*975	FB105.8	2	.. Arm Setscrew	
*939	50538	1	Steering Column Bearing		*976	50412	2	Woodruff Key	
*940	50580AS	1	Horn Slip Ring Assembly Lucas No. 50801		*977	FN408 K	2	Slotted Nut— $\frac{1}{2}$ in. B.S.F.	
*941	50542	1	Steering Column Support Bracket		978	50566	2	Steering Rod	
*942	50543	1 Cap		+979	50503	1	.. Bracket Gasket	
+943	51211	1	Packing Piece (De-luxe 51376)		980	50499	1	.. Box Assembly	
944	50545	1	'U' Bolt		+981	50511	1 Oil Seal	
*945	50544	1	Felt Bearing (Gear Change)						
946	J54539	1	Steering Wheel (De-luxe)					RIGHT HAND DRIVE ONLY	
+947	53338	1 (Standard)		+991	50499AS	1	Steering Box Assembly, less Column	
948	50541	1 Nut		+992	50499R	1	Reconditioned Steering Box, less Column	
950	50557	2	.. Link Cone Nut		993	50533AS	1	Steering Column Tube Assembly	
951	52054	2 Tab Washer		994	50553	1	.. Link	
952	50558	2 Lock Nut		+995	52667	1	.. Arm—R.H.	
953	52172	2 Greaser		996	52666	1 —L.H.	
955	52175	2	.. Rod Lock Plate					LEFT HAND DRIVE ONLY	
956	50547	1	Intermediate Steering Arm					Steering Box Assembly, less Column	
957	50549	1	Bearing Cone		+1007	52364AS	1	Reconditioned Steering Box, less Column	
958	50386	1	'D' Washer		+1008	52364R	1	Steering Column Tube Assembly	
959	50571	4	Greaser		+1009	52283AS	1	.. Link	
960	FB106.38	1	Bolt, $\frac{3}{8}$ in. \times $4\frac{1}{4}$ in.		+1011	52359	1	.. Arm—L.H.	
961	52074	1	Steering Spring (Intermediate Steering Arm)		+1012	52678	1 —R.H.	
962	52287	as reqd.	.. Rod Pad Shims (.002 in. and .005 in.)		+1013	52679	1		
*+963	54012	2	.. Ball Joint Assembly						

* Denotes items common to Jupiter

† Denotes items not illustrated

Always quote engine, body-frame, part and item numbers in full.