


# Brakes

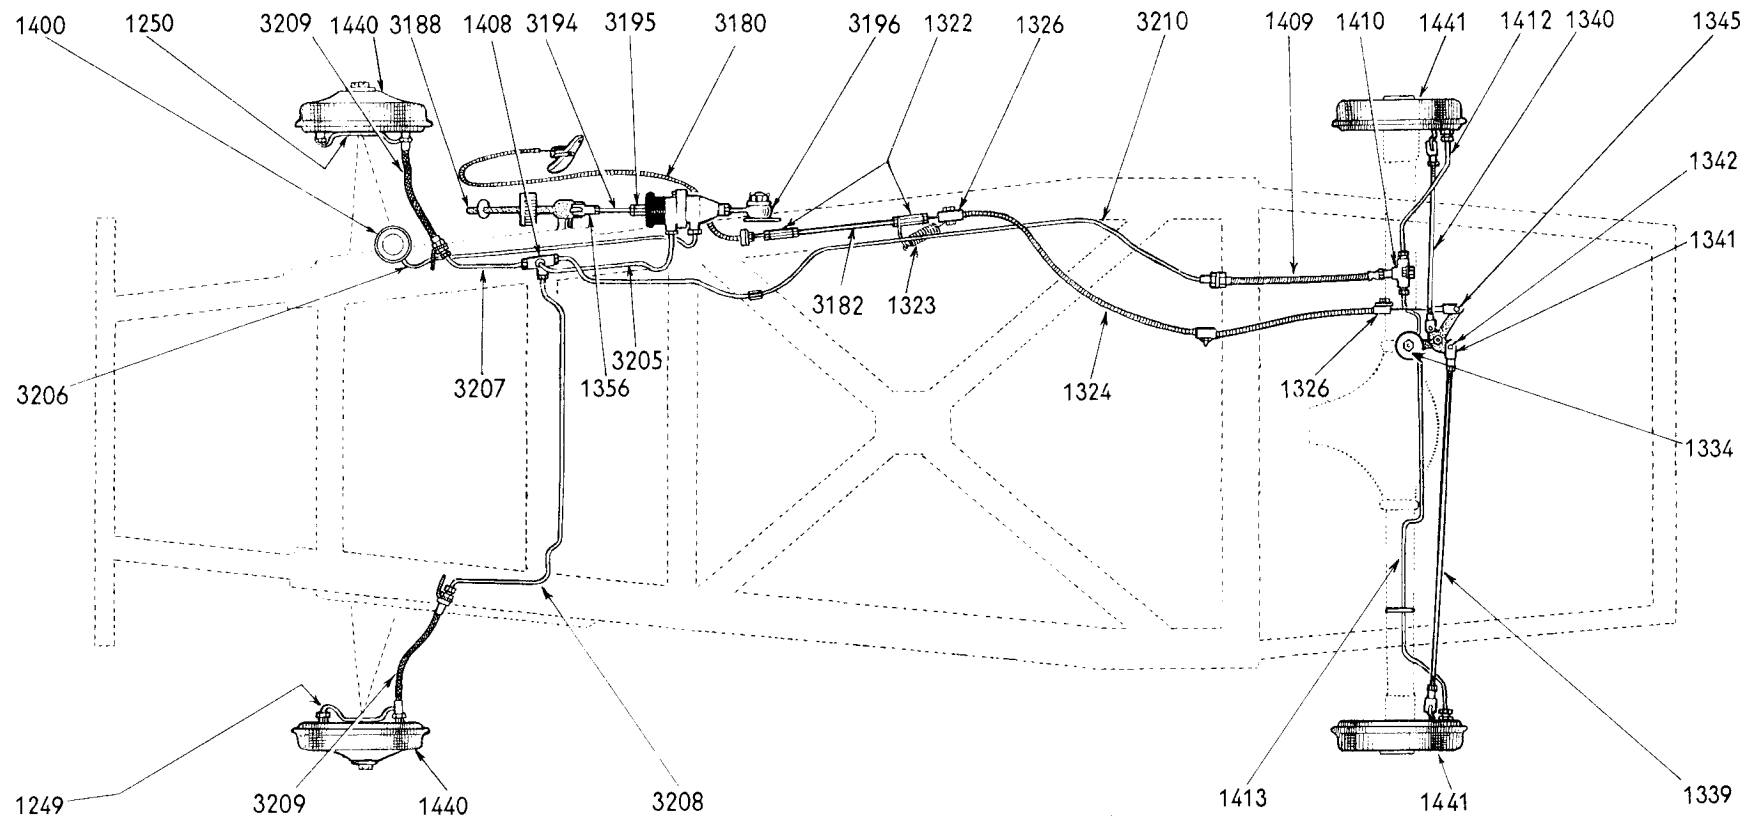

Item No.	Part No.	Quantity	Description	Notes	Item No.	Part No.	Quantity	Description	Notes	
<b>BRAKES</b>					<b>MASTER CYLINDER</b>					
			<b>HANDBRAKE OPERATING MECHANISM</b>		†3200	H2588	1	Plunger Rod		
3180	53113	1	Handbrake Operating Cable Front—R.H.D.		†3201	H1836	1	Jaw End		
†3181	54095	1	„ Cable Front—L.H.D.		<b>SUPPLY TANK, PIPES AND HOSES</b>					
3182	53459	1	„ Rod—R.H.D.		3205	53513	1	Hydraulic Pipe Master Cylinder to four-way Connector—R.H.D.		
†3183	53647	1	„ —L.H.D.		3206	53515	1	Hydraulic Pipe Assembly Master Cylinder to Supply Tank		
<b>BRAKE PEDAL MECHANISM</b>						3207	53511	1	Hydraulic Pipe Assembly—R.H. Front to four-way Connector	
3188	53391	1	Brake Pedal—R.H.D.		3208	53512	1	Hydraulic Pipe Assembly—L.H. Front to four-way Connector		
†3189	53541	1	„ —L.H.D.		3209	53520	2	High Pressure Hose Assembly, 17 in. long		
†3190	52931	1	„ and Clutch Pedal Assembly—R.H.D.		3210	53514	1	Hydraulic Pipe Rear Hose to four-way Connector		
†3191	53534	1	„ —L.H.D.		†3211	J54652	1	Hydraulic Pipe Master Cylinder to four-way Connector—L.H.D.		
†3192	52928	2	Pedal Retaining Collar							
†3193	53390	1	Stop Switch Spring Plate							
3194	53396	1	Rod, Actuating Brake							
3195	50427	1	Master Cylinder Adaptor							
3196	53399	1	Eyebolt—R.H.D.							
†3197	54073	1	„ —L.H.D.							

\* Denotes items common to Jupiter

Always quote engine, chassis, part and item numbers in full.

† Denotes items not illustrated