

Body Frame Assembly

Item No.	Part No.	Quantity	Description	Notes	Item No.	Part No.	Quantity	Description	Notes
†3555	1B56234	1	Dash and Cowl Assembly		†3599	55388	2	Tail Connecting Strip—Top	
3556	55257	1	.. Front Panel		†3600	55389	2 —Bottom	
3557	55265	1	.. Side Panel—L.H.		†3601	55291	1	Side Frame, Rear—R.H.	
3558	55266	1 —R.H.		†3602	55292	1 —L.H.	
†3559	55365	1	.. Floor Support		3603	55295	1	Cross Frame—Intermediate	
†3560	55815	1	.. Front Outer Panel Assembly—R.H.		3604	55296	1 —Rear	
†3561	55816	1 —L.H.		3605	55390	1	.. Brace Assembly	
3562	55867	1	.. Heel Well		†3606	55301	2	Rear Panel Attachment Strip—Rear	
†3563	55277	1	Front Cross Member Channel		†3607	55392	1 —Bottom R.H.	
3564	55278	4	Mounting Bracket		†3608	55393	1 —L.H.	
†3565	55279	4 Support		3609	55298	1	Frame Side Valance Panel—R.H.	
†3566	55281	2	Diagonal Stay		3610	55299	1 —L.H.	
†3567	1B56235	1	Cowl Panel Assembly		3611	55267	1	Bulkhead Panel—Centre	
3568	1B56337	1 Top—L.H.		3612	55263	1 —Side R.H.	
3569	1B56336	1 —R.H.		3613	55264	1 —L.H.	
†3570	55921	1 Side—L.H.		3614	55270	1	Tunnel	
3571	55922	1 —R.H.		3615	55805	1	Battery Box Assembly—R.H.	
†3572	55834	2	Stiffener Accelerator Bracket Assembly		3616	55806	1 —L.H.	
3573	55827	1	Cover Panel Assembly		3617	55822	1	Waist Rail	
†3574	55214	1	Bracket—Hinge Bottom Assembly—R.H.		†3618	55823	1	Hood Attachment Rail	
†3575	55215	1 —L.H.		3619	55261	1	Lock Pillar Gusset—R.H.	
†3576	55213	4	Check Strap Bracket		3620	55262	1 —L.H.	
†3577	55732	1	Steering Column Support Bracket		3621	55377	1 Bracket—R.H.	
†3578	55927	1 Stay Assembly—L.H.D.		†3622	55378	1 —L.H.	
3579	1B56232	1	Instrument Panel		3623	55817	2	Boot Door Support Bracket	
†3580	1B56237	1	Reinforcement Bottom—R.H.		†3624	55917	2	Trafficator Bracket—R.H.	
†3581	1B56238	1 —L.H.		†3625	55918	2 —L.H.	
†3582	1B56257	1	Spring for Glove Box Catch		3626	55096	1	Water Channel	
3583	55274	1	Body Hinge Pillar—R.H.		†3627	55186	1	Top Hinge Bracket—R.H.	
3584	55275	1 —L.H.		†3628	55187	1 —L.H.	
†3585	55373	1	Base Frame Assembly		†3629	55384	1	Tail Frame Assembly, complete	
3586	55374	1	Sill Panel Assembly—R.H.		†3630	55396AS	1	Bulkhead Assembly	
3587	55375	1 —L.H.		†3631	53108	1	Spare Wheel Carrier, complete	
3588	55259	1	Body Lock Pillar—R.H.		3632	55825	5	Fixing Tab Waist Rail	
†3589	55260	1 —L.H.		3633	55785	1	Sill Closure Plate—R.H.	
†3590	55824	2	Waist Rail Attachment Bracket		†3634	55786	1 —L.H.	
†3591	55280	1	Rear Cross Channel Assembly		†3635	55276	2	Front Cross Member Closure Plate	
3592	55379	1	Centre		†3636	55287	1	Centre Cross Channel Top Plate	
3593	55289	3	Seat Support Channel		†3637	55285	1	Closure Plate Cross Channel—Rear	
†3594	55385	1	Tail Frame Front Member Tube Assembly		†3638	55356	4	Silentbloc Mounting	
3595	55290	1		†3639	55353	as reqd.	Mounting Washer	
†3596	55293	1	.. Side Frame Front—R.H.		†3640	55354	..	Washer	
†3597	55294	1 —L.H.		†3641	55820	2	Mounting Bush—Anti-vibration	
†3598	55387	2	.. Base Frame Attachment Bracket						

* Denotes items common to Jupiter

† Denotes items not illustrated

Always quote engine, chassis, part and item numbers in full.