

Body Trim

Item No.	Part No.	Quantity	Description	Notes	Item No.	Part No.	Quantity	Description	Notes
†4062	1B. 56331	1	Waist Rail Capping Assembly—R.H.		†4077	55778	1	Glove Fixing Plate	
†4063	1B. 56332	1	„ „ „ —L.H.		†4078	55783	2	„ Square Washer Plate	
†4064	55634	1	Side Scuttle Trim Panel Assembly—R.H.		†4079	55789	1	Rubber-backed Felt— $\frac{1}{4}$ in. check \times 48 in. \times 22 in.	
†4065	55365	1	„ „ „ —L.H.		†4080	55779	1	Revelation Case (Gents)—optional	
†4066	51385	18	Trim Panel Screw—Self-tapping No. $6 \times \frac{1}{2}$ in.		†4081	55780	1	„ „ (Ladies)—optional	
†4067	55682	18	Cap Washer, No. 6					ANTI-SQUEAK MATERIAL	
†4068	55903	2	Screen Top Trim Fillet					Front Wing—Top Piping	
†4069	55908	2	Fillet Cover		4090	55661	2	„ „ —Bottom Piping	
†4070	55639	24	Trim Board Retainer Plate		4091	55662	2	„ „ —Apron Piping	
†4071	55640	24	„ „ Spring		4092	55663	2	Rear „ —Top Piping	
†4072	55642	2	Lock Pillar Trim Panel Assembly		4093	55664	2	„ „ —Bottom Piping	
†4073	55645	2	Quarter Panel Cover		4094	55665	2	Side Strip—Sponge Rubber	
†4074	55646	2	Bulkhead Side Trim Panel Assembly		†4095	55402	2	Centre „ „ Rubber	
†4075	55649	1	„ Centre „ „ Assembly		†4096	55403	2	Bonnet Insulating Strip	
†4076	55777	1	Steering Column Glove		†4097	55479	2		

Electrical Equipment and Instruments.

Item No.	Part No.	Quantity	Description	Notes	Item No.	Part No.	Quantity	Description	Notes
			DYNAMO		†4156	821032	1	Negative Cable (Battery to Solenoid)	
†4120	52732	1	Dynamo (Lucas No. 22436)		†4157	821033	1	Body to Chassis Earth Lead	
†4121	52732R	1	Reconditioned Dynamo		†4158	821034	1	Engine to Chassis Earth Lead	
†4122	53373	1	Dynamo Pulley		†4159	860096	1	Horn to Earth Wire	
†4123	52980	1	„ and Water Pump Support Strap		†4160	999140	1	Coil to Distributor	
†4124	52983	1	„ Rear Support		†4161	812506	1	Positive Lead (Battery to Earth)	
†4125	52732/1	1 set	„ Brushes (Lucas No. 238061)		†4162	999621	1	Solenoid to Starter	
†4126	52732/2	1	„ Cover Band (Lucas No. 227015)		†4163	810316	1	Battery to Battery	
†4127	52732/3	1	Commutator End Bracket (Lucas No. 238877)		†4164	821021	1	Panel Main Harness	
†4128	52732/4	1	„ „ Bush (Lucas No. 238567)		†4165	821022	1	Loom (Petrol Tank—Rear No. Plate)	
†4129	52732/5	1	Oiler (Lucas No. 238367)		†4166	821023	1	Loom (Fog Lamp—Heater—Trafficator)	
†4130	52732/6	1	Brush Tension Spring (Lucas No. 238062)		†4167	821024	1	Trafficator Wire—N.S.	
†4131	52732/7	1	Drive End Bearing (Lucas No. 189308)		†4168	821025	1	„ „ —O/S	
†4132	52732/8	1	„ „ Bracket (Lucas No. 237119)		†4169	821026	1	Panel Light Loom	
†4133	52732/9	1	Nut Shaft (Lucas No. 180620)					WIRING CLIPS	
†4134	52732/10	1	Armature (Lucas No. 238833)		†4175	53063	1	N/S Front Suspension	
†4135	52732/11	1	Field Coil (Lucas No. 238820)		†4176	53063	1	Rear Tube Front Suspension	
†4136	52732/12	1	Sundry Parts, 239024 (set)		†4177	53063	1	Horn and Ignition Lead Clips	
†4137	52732/13	1	Cover Terminal		†4178	53064	3	Rear Extension Cross Member	
†4138	51361	1	Tachometer Drive Gear (dynamo)		†4179	53065	6	O/S Oil Pipe Capillary Tubes	
			COIL AND DISTRIBUTOR		†4180	53065	4	Dynamo Horn Wiring	
†4145	1. 53944	1	Ignition Coil less Acorn Nut		†4181	53065	6	Lamp Cables to Ribs	
†4146	J54641	1	„ „ Acorn Nut		†4182	53066	3	Battery Cable to N/S Frame Side	
†4147	53394	1	Distributor Suction Pipe, complete		†4183	53066	3	Head Side Harness to Scuttle	
			PLUGS AND LEADS		†4184	53066	2	„ „ „ „ Scuttle	
†4150	53656	4	Spark Plug, Champion L 10S		†4185	53067	1	„ „ „ „ Lamp and Wiper	
			WIRING		†4186	53067	1	Stop, Tail, Petrol Pump, Heater Cable	
†4153	1. 53723	1	Main Cable Harness		†4187	53068	2	Wiper, Cable on Scuttle	
†4154	55362	1	Insulating Bush Wiring Assembly		†4188	53069	2	Harness to Instrument Panel	
†4155	54025	1	Horn Relay Wire					GROMMETS	
					†4195	53060	1	Harness	
					†4196	53061	1	„ to Control Box	

* Denotes items common to Jupiter

Always quote engine, chassis, part and item numbers in full.

† Denotes items not illustrated