

## **Special Attention**

The Jowett Service Organisation has throughout the world appointed Main Agents who carry comprehensive stocks of replacement Spare Parts.

All requests for replacement parts should be made to an Authorised Jowett Agent, who will either supply from stock, or obtain them from the Factory.

## **Caution**

To ensure satisfactory service only parts of genuine Jowett manufacture should be used. Imitations cannot be relied upon to provide the quality of material and the accuracy of workmanship found in Jowett manufactured parts.

If imitations are used, the Company's Guarantee is infringed and becomes null and void. Always obtain your replacements from authorised Jowett Agents, as they stock only genuine Jowett spare parts.

Should repairs be executed by other than an authorised Jowett Agent, for safety's sake always obtain a guarantee that genuine Jowett spare parts have been used.

## **Instructions for Ordering**

In the interest of quick service and to be certain you obtain the correct part it is essential that you quote the following:---

- (A) The Engine and Body numbers in full.
- (B) The quantity required (*not sets*).
- (C) The Part and Item Numbers.
- (D) Technical description of part as listed in this Catalogue.

### **NOTE:-**

**JAVELIN** *The Engine Number is stamped on the nearside front of the Crankcase and the Body Number is stamped on a plate attached to the Scuttle Dash.*

**JUPITER** *The Engine Number is stamped on the nearside front of the Crankcase and on a plate attached to the Offside Front Engine Shield.  
The Chassis Number is stamped on the nearside Bonnet Clip Bracket.*

## **Abbreviations**

The letters "R.H." or "L.H." used in conjunction with the description of a part refers to the right- or left-hand side of the driver when seated in a driving position.

Letters "R.H.D." or "L.H.D." refer to right-hand drive or left-hand drive models.