

Brake Mechanism (Hand and Foot)—continued

Item No.	Fig. No.	Part No.	Description	£	s.	d.
623.		AS6007x9	Outer Brake Cross-shaft with Flange on Middle Crossmember	6	6	
624.	8	AS6007x5	Outer Brake Cross-shaft Support Bracket with Collar on Middle Crossmember	1	3	
625.	8	6022x8	Felt Washer for above			6
626.	8	4195x4	Brake Compensator Lever between Cross-shafts	1	0	
627.	8	4198x11	Fixing Nut for Flange			5
628.	8	AS6007x10	Inner Brake Cross-shaft complete with Flange	5	6	
631.	8	4102x10	Brake Compensator Shank with Levers on R. Axle	4	0	
631a.		AS4102x10	Brake Compensator complete on R. Axle	19	6	
632.	5	AS4109x3	Brake Compensator Bracket on R. Axle	1	6	
633.		AS4780x1	Brake Compensator Bracket	1	6	
634.	8	4098x8	Brake Compensator Link	7	6	
635.	8	4098x9	Brake Compensator Link Bush	1	0	
636.	8	ND1425	Greaser			3
637.	8	4095x15	Fixing Washer	1	0	
638.	8	4095x16	Distance Washer	1	0	
639.	8	6177x2	Brake Rod, Handbrake to Cross-shaft (Link No. 9)	1	0	
640.	8	6007x1	Fork End for above—long	2	6	
641.	8	6007x2	Fork End for above—short	2	3	
642.	8	4306x10	Brake Rod on F. Axle—short (Link No. 1)			9
643.		4306x11	Brake Rod on F. Axle—long (Link No. 2)	2	0	
644.	8	4198x4	Fork End for Brake Rods, $\frac{5}{16}$ in. dia.	2	0	
645.		6151x2	Brake Rod F. Axle to Compensator Shaft (Link No. 3)	1	3	
646.		4334x9	Fork End for above—short	2	0	
647.	8	4198x5	Joint Jaw on Link Lever	2	3	
648.		6151x3	Brake Rod, Compensator Shaft to Link Lever (Link No. 4)	2	0	
651.		6151x1	Brake Rod Rear Link Lever to Back Axle (Link No. 6)	1	0	
652.		4334x9	Fork End for above—short	2	0	
653.		4109x9	Brake Rod on Back Axle—short (Link No. 7)			6
654.		4109x8	Brake Rod on Back Axle—long (Link No. 8)	1	6	
655.	8	4198x6	Brake Rod Swivel Pin			6

Petrol Tank and Feed

665.	7026	Petrol Tank Unit	2	7	6
666.	2484x7	Drain Plug			9