

ITEM No. 6.

CORRECT FITTING OF SPEEDOMETER CABLE

When fitting a speedometer cable, care must be taken to give it a generous arc as it emerges from its Gearbox attachment. It should then be fixed with a retaining clip to the angle reinforcement between the inclined and detachable floorboards. See Fig. 1.

It can then be taken forward to clip on the inclined floorboards and thence to the speedometer.

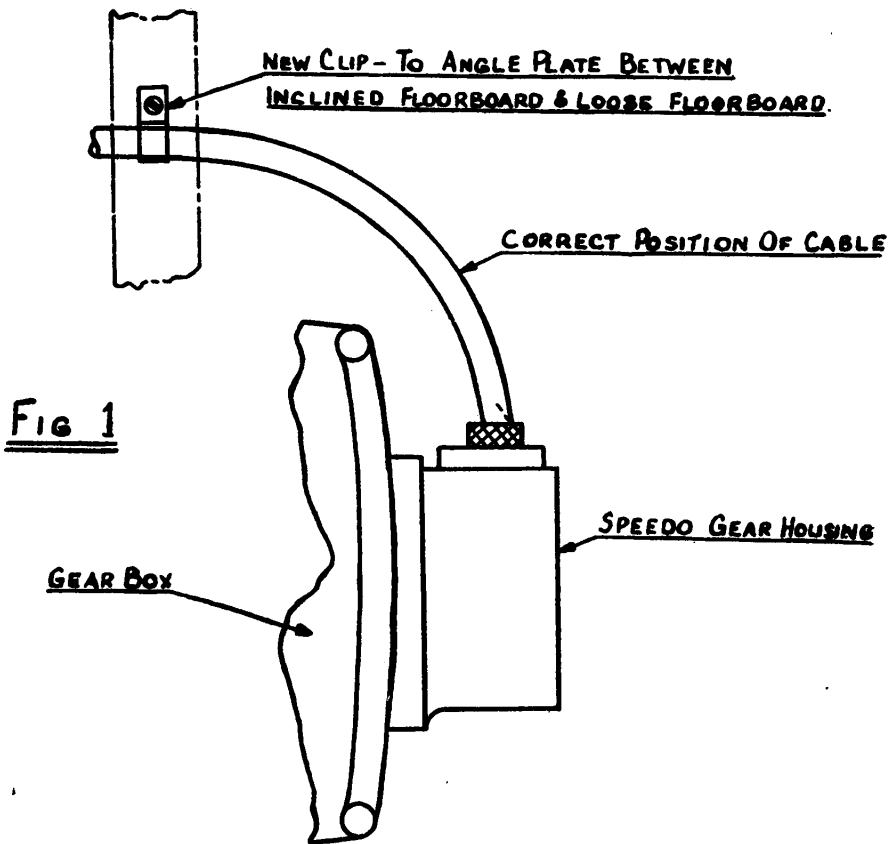


Fig 1

PLEASE VERIFY THAT ALL SPEEDOMETER CABLES ON BRADFORD VEHICLES PASSING THROUGH YOUR AGENCY ARE FITTED IN ACCORDANCE WITH THE ABOVE INSTRUCTIONS