

flat washer, 2" (50.799mm) outside dia. x 1/8" (3.175mm) thick under the nuts beneath the dash panel.

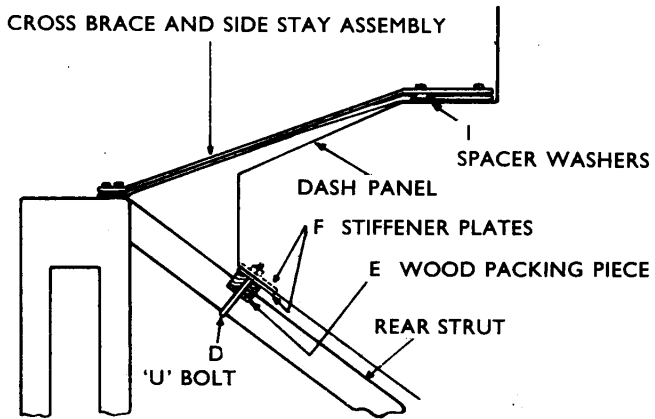


FIG. 3

NOTE. The holes where the cross braces and side stays overlap at the dash panel should be drilled after the cross braces and side stays have been fitted.

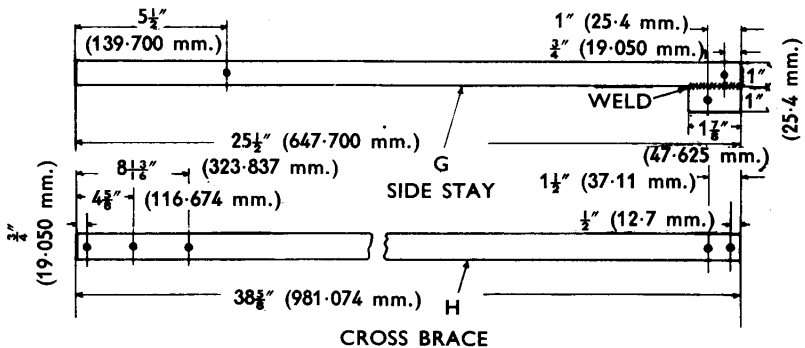


FIG. 4